


ELF Drop-In Trigger Installation Instructions

Step 1

After ensuring weapon is unloaded, remove old trigger and safety taking care not to lose safety detent and spring when removing grip.(If further assistance is needed there are thousands of pages on the internet) with instructions)

Step 2

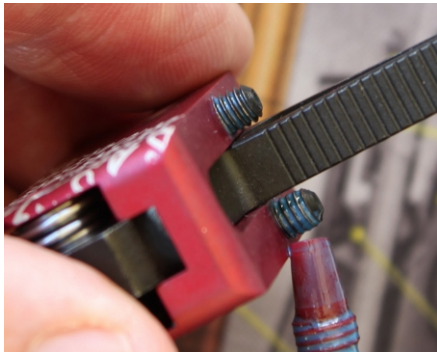


Prepare trigger by turning set screws out about 3/16" & placing a very small amount of blue threadlocker on threads

Step 3



Turn set screws back until they are both flush with bottom of trigger and wipe off any excess threadlocker

Step 4

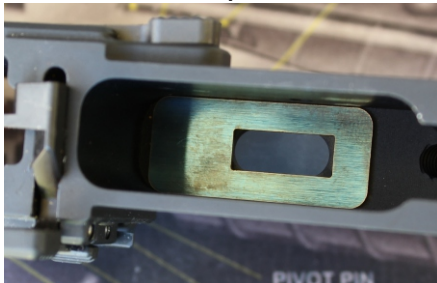

Insert steel floorplate to protect receiver

Step 5



Drop in ELF trigger and replace pins


Step 6



Center the pins in the receiver and firmly seat the two set screws on the inside of the trigger body. It is absolutely critical that these screws are seated firmly even if anti-walk pins are used. Turn each side until it just touches, then alternate so the pressure is evenly distributed.

This will hold the pins with pressure against the receiver holes.

Step 7

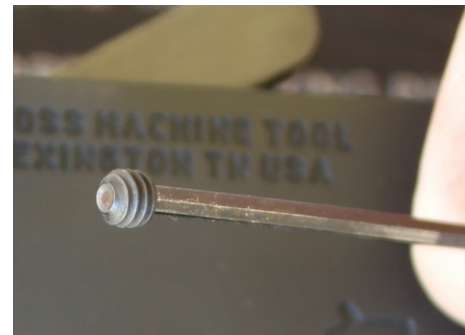


After firmly seating set screws, install 1/8" lock screws on top to lock them in place

Step 8



With hammer in "half cock" position, insert safety and grip with safety detent and spring in place.

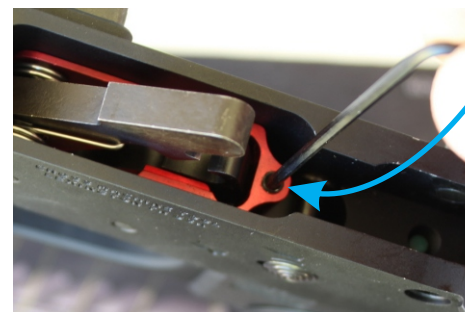

Pull weight is adjustable with this screw. Clockwise = heavier. If adjusted too light, the disconnecter won't release hammer. Hammer is full power regardless of trigger pull weight.

Check trigger and safety function